



Description:

This Control Panel template is to be used with the Auto Trigger Composite tool (Auto Trigger.tool). It will allow the user to adjust the tool's parameters from a Control Panel. Auto Trigger Composite tool doesn't have to be placed in a task for this Control Panel to function, having the tool loaded on the device will give the user access to its parameters.

After the Control Panel template is added to the Control Panel, you must connect it to the desired device. Enter the device's IP Address in the IP Address property and set the Connected property to True.

Ports:

Name	Type	Description
Enable When Place Online	Boolean	When this is set to true, the auto trigger sequence is started when the device is placed online.
Time Between Triggers	Integer	The number of milli seconds between triggers.
Use GP Event to Gate Trigger	Boolean	When this is set to true, the auto trigger sequence will start when an Input (General Purpose) event is present on the device's I/O and will stop when the event is not present. The sequence starts with the event trigger rising edge and stops with the falling edge.
Start/Stop	Button	Click this button to start and stop the Auto Trigger sequence.